




COURONNE CO.

M106
Assembly Instructions

Assemble your stand starting from the bottom (base) and work your way towards the top.




1) Begin by aligning the leg pieces to fit the pole. With the single leg piece above the two legged piece slide the pole in as shown.

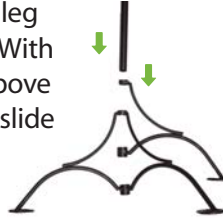

2) Make sure the pole is secure in the bottom of the base. Also move the single leg piece to the correct side of the screw hole from the two legged piece as shown. Finally tighten the screw to secure the two legged piece.



3) Slide the single leg piece around until it touches the screw from step two.

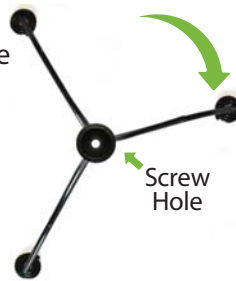


4) Stabilize the base by tightening the screw for the single leg piece.

! If single leg piece is on the wrong side of the screw hole you will not have room to evenly adjust the legs.

! Screws will not tighten all the way. Please stop applying pressure when screw will no longer turn


5) Slide the second pole into the opening of the first pole on the base. Once the pole is in place tighten the screw to stabilize the pole in place.

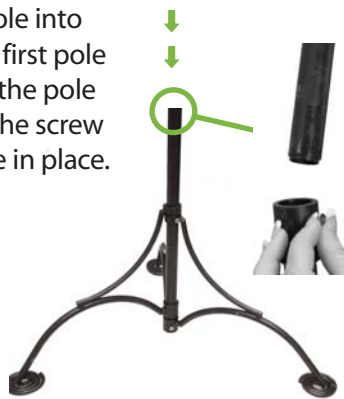

6) Repeat this process for the top portion of the stand.




7) Hook the metal arm (M20) into the scroll of each side of the stand as shown below.

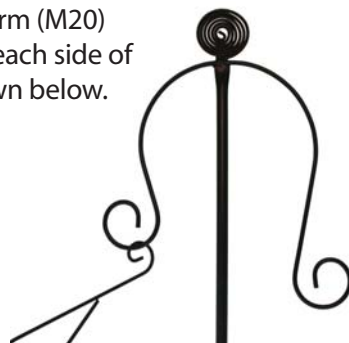

8) If needed, gently pull the two arms apart so the vase will hang evenly.

The amphora vase should hang freely. The neck of the vase should not touch the metal.

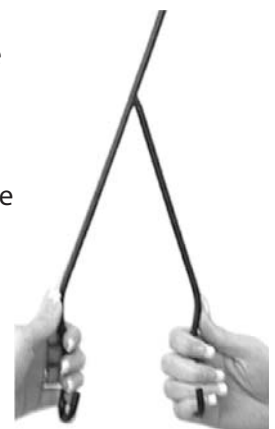

Once the assembled piece is hanging you are ready to fill this unique floor stand with your favorite floral arrangement